

705 - WASHING MACHINE CLEANER

WASHING MACHINE CLEANER is a biodegradable cleanser to remove biofilm, soap residues and coatings in the washing machine. The daily use of low temperature washing programs gives a breach risk of mold and bacteria that can get stuck in the clothes. This is best prevented by regular use of Washing Machine Cleaner. Cleans also machine tubes and pipes, which extends the life of the machine.

Instructions

Dilute 0,5 dl in 5 L of warm water, use a brush or cloth to clean the soap dish, rubber wreath and glass lid, wait to let dry and then fill the remaining bottle in the cleaned soap dish and run a high temperature program (Min. 95°C) without clothes and soap.

Declaration

Contains: 15-30% Citric acid, <5% non- ionic surfactants, <5% amphoteric surfactants. Also contains: water, isopropyl alcohol and perfume.

WARNING: Causes serious eye irritation. Keep out of the reach of children. Wash skin thoroughly after handling. Wear suitable eye protection.

IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. If eye irritation persists: get medical advice/attention.



Conditioning

250ml (12 units/box) / 500ml (12 units/box)

If you have any questions, please contact our Technical Department on: +45 4817 6970